

USB OR CORDLESS KEYBOARD OR NUMERIC KEYPAD DOESN'T WORK (WINDOWS 7)

SCENARIO

Since installing **Windows 7** (from **Vista**) my numeric keypad does not work (and yes I have checked that the Num Lock is on). I've checked that the driver is current and cleaned the keyboard and contacts. Funny thing is when I moved the keyboard to another computer, the numeric keypad worked fine.

SOLUTION

- Open **On-Screen Keyboard** by clicking the **Start** button, clicking **All Programs**, clicking **Accessories**, clicking **Ease of Access**, and then clicking **On-Screen Keyboard**.
- Click **Options**, select the "Turn on numeric key pad" option check box, and then click **OK**.

